

To install Tresco® International TQ® Lighting:

Before beginning any wiring, make sure power is turned OFF to lighting system.

Basic Mounting Instructions (Plug-in)

1. Determine location to place TQ lighting.
2. Place TQ fixture down on tabletop or counter, with glass diffuser cover facing up.
3. Unscrew diffuser and carefully remove.

(NOTE: for hard wiring, see steps A through F below)

4. To mount light, drill 1/16" pilot holes using the light's keyhole slots as a template. (Note: Take caution not to drill through top side of shelf or cabinet). Using screws provided, fasten base in place. (Be sure screw length is shorter than thickness of mounting surface.)
5. Add Xenon bulbs (provided) and mount into sockets in fixture (NOTE: keep bulbs in foam pads while installing. Touching bulbs directly with hands may damage bulbs.) After installing bulbs, discard foam pads.
6. Screw glass diffuser back onto fixture.
7. Plug-in or connect power as needed.

Hard wire (alternate wiring)

Complete Steps 1 through 3 above, then follow hard wire steps below.

- A. Gently squeeze metal access panel and pivot out of slots in light case.
- B. Remove power cord and plug –
 - a) Cut power cord from light fixture, leaving approx. 6" of cord.
 - b) Using pliers, grip and squeeze power cord's plug restraint (notice tab with slots in plug restraint). (Discard plug restraint.)
 - c) Pull the remaining 6" cord through opening to inside of fixture housing.
 - d) Pull the remaining 6" cord through opening to inside of fixture housing.
 - e) Cover up the power cord opening with snap-in cover (provided)
- C. Pull apart the two wires of the power cord by 1 or 2 inches and carefully strip 1/2" insulation off each wire.
- D. Take wires from 120V power source and route through any knockout. (Stamped knockouts are provided on back, top, or at either end of fixture.)* Use Romex® connector at knockout (not provided). (NOTE: do not reroute wires through original power cord opening.)


Follow Step 4 above to mount fixture, then proceed to step E below.

- E. Connect wires from 120V power source to the fixture wires using wire nuts and electrical tape (not provided).
- F. Tuck in any excess wire length back into fixture and snap metal access panel back into position to cover wires.

Complete hard wire installation by following Steps 5 through 7 above.


* Note: A special knockout to accept Wiremold® is included on each end. To use this, break off metal knockout tab. After mounting light, Wiremold can be positioned into special knockout openings.





Installation Instructions for Tresco® International TQ® Lighting

Tresco International's TQ Tresco Quick lighting is designed to mount under a cabinet or shelf. Plan the best installation option for your application. Unit plugs into 120V outlet or can be hard wired. Lights can be mounted and powered individually or can be installed end-to-end and wired from one light to the next.

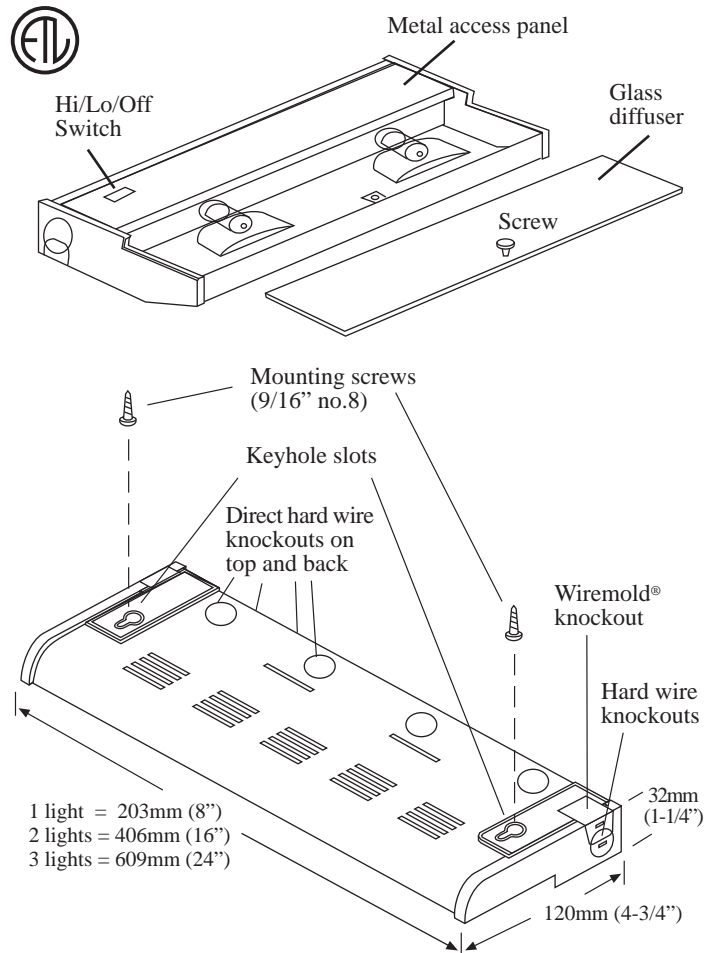

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: to reduce the risk of fire, electric shock, exposure to excessive UV radiation or injury to persons:

- Use max. 35W Xenon or halogen bulb.
- Before replacing bulb, turn off (or unplug) and allow bulb to cool. Use a soft cloth to handle bulb as skin oil may damage bulb.
- Do not look directly at bulb.
- Bulb gets hot. Do not touch bulb, lens, lens holder or enclosure when system is in use.
- Do not operate system if lens is missing or damaged.

This light is intended to be used as a cabinet light on wood, particle board or other structurally sound, heat resistant surfaces. Care should be taken during and after installation to avoid contact of light with wiring, cord, or any combustible material.

Save these instructions for future reference.

For technical assistance: 1-800-227-1171
www.trescointernational.com tresco@cboss.com